



1.

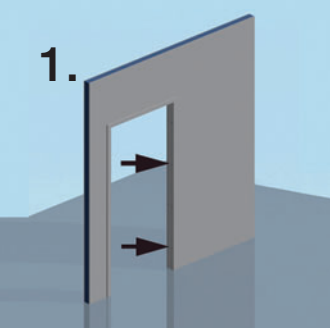

# Installation direction for the door and for the frame



4a.

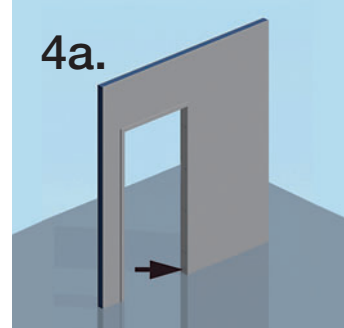



# Liune

## Aulis Lundell Oy


2.

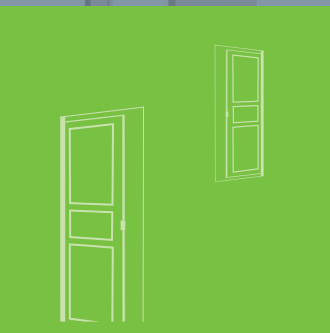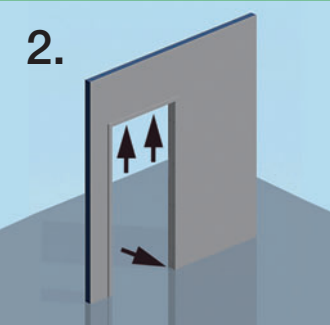

3.

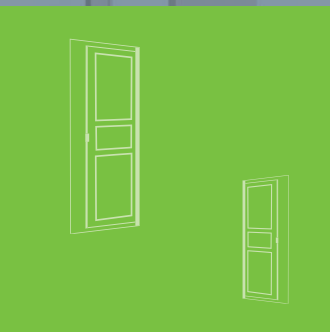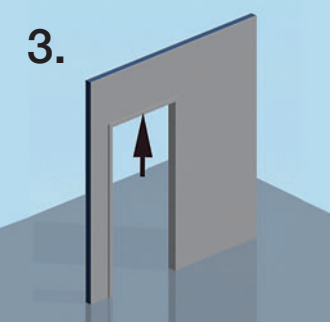

3a.

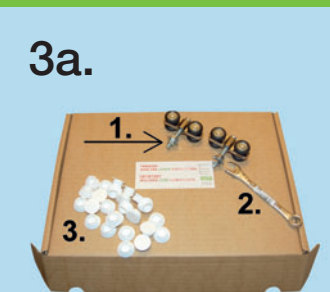

**1.** Remove the protective slates from the prefabs' door frame. After the plastering is done, the prefabs' upright gap must be onwards converging

**2.** The prefabs' slide and control runners' cleanness must be assured before installing the door.  
➔ If needed, clean!

### 3a. Content of delivery:

- The door
- Frames
- roller wheels
- cover plugs
- 10 mm wrench

**3.** Install the roller wheels to the prefabs' skid runners that are included with the door.

### 4. Installing the doors

**a.** Insert the slot located at the bottom of the door, to the prefabs T-runner

**b.** Place the roller wheels' connection bolts on top of the door's connection plaster thus, that the washer is underside the and the attachment plate above it.

**c.** Adjust the height of the door thus it isn't lying above the T-runner. Tighten up the connection bolts.

### 5. Installation of the door frames

**a.** Install the wide counter frame. Check straightness of the door by relating with the door frames.



**b.** Install the thin upright frame slates both sides of the door.

**c.** Install the thin top frame slates.



**NOTICE!** The frame slates will be installed thus, that the door- runs without problems through the middle of the frame slates.

- The chosen surface slate (does not include with the delivery) is connected with the frame by nailing, which makes the Liune door and the frames are afterwards changeable
- The producer does not respond if the instructions are not followed.

4.

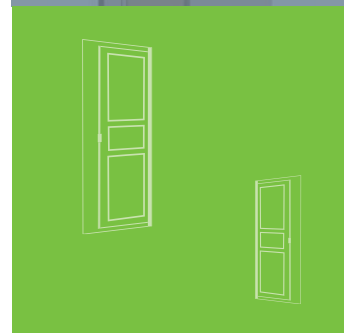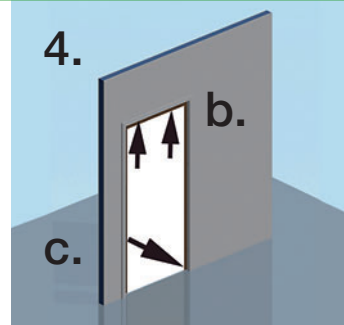

5.

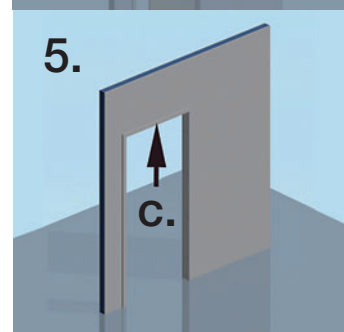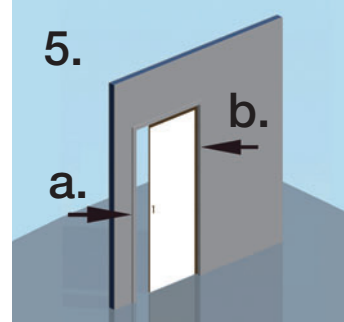

**Liune Door sales office:**

**Aulis Lundell Oy**  
Tel. +358 20 7341 400  
liune@aulislundell.fi  
www.liune.fi

**LIUNE™**  
www.liune.fi

